

PINNACLE




Folded stair lift

Harmar's Home Access Products build upon our commitment to mobility by breaking down barriers in the home and making every room of the house accessible. Harmar has a full line of Vertical Platform Lifts, Stairway Lifts and Bathroom Lifts designed to safely increase your mobility and home accessibility. Harmar products are available exclusively through a nationwide network of authorized dealers. Customers receive care from the nation's top mobility dealers. Harmar's dealers will assist in determining the best product to fit your needs and budget. It is imperative to have an authorized Harmar dealer demonstrate, install and service your Harmar equipment. Harmar's products are designed and built with the "Harmar difference" - they are simpler, stronger, lighter and easier to use.



MADE IN USA

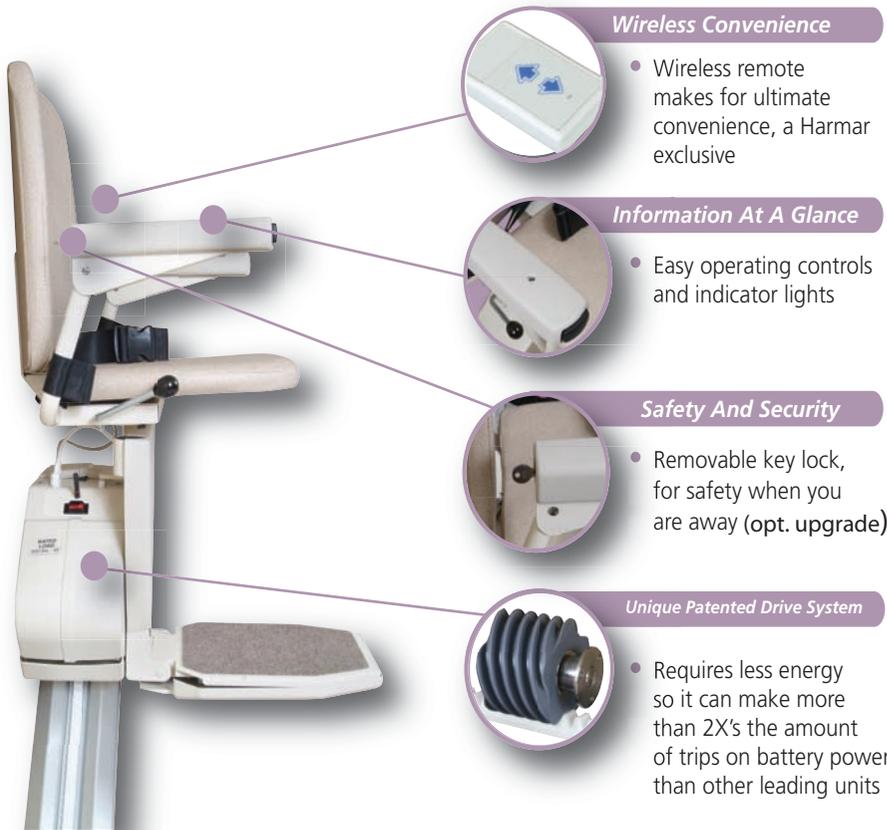

Wireless Convenience

- Wireless remote makes for ultimate convenience, a Harmar exclusive

Information At A Glance

- Easy operating controls and indicator lights

Safety And Security


- Removable key lock, for safety when you are away (opt. upgrade)

Unique Patented Drive System

- Requires less energy so it can make more than 2X's the amount of trips on battery power than other leading units

Maximum weight capacity	350 lb.
Electrical requirements	115 VAC
Operation power	24V DC Battery
Maximum travel	70 ft
Speed	17 ft/min.
Incline Limits	32 – 52 degrees
Drive system	Polymer worm/worm-rack
Motor output speed at rated load	62 rpm
Motor output torque at rated load	18 lb ft
Motor output amps at rated load	14 Amps
Track (rail) type	Extruded aluminum
Average return trips per charge (varies with load, length)	20 – 40
Tools required to install	5
Symmetrical lift (left or right stair)	Yes
Interchangeable arms (left or right hand operation)	Yes
Need to open chassis to install or change sides?	No

- Standard unit is 16ft, additional lengths available up to 70ft
- Easily changeable from left to right side
- Patented helical worm drive
- No greases or lubricants; easy to vacuum and keep clean
- Made in the USA!
- Aesthetically pleasing appearance and robust construction
- Narrowest stairlift in the industry – only 11" folded
- Comfortable seat with height adjustment
- Swivel seat at upper landing, for easy and safe entry and exit
- Safety sensors that stop the lift when it meets with an obstruction
- 3-year warranty on components / 5-year on drive train

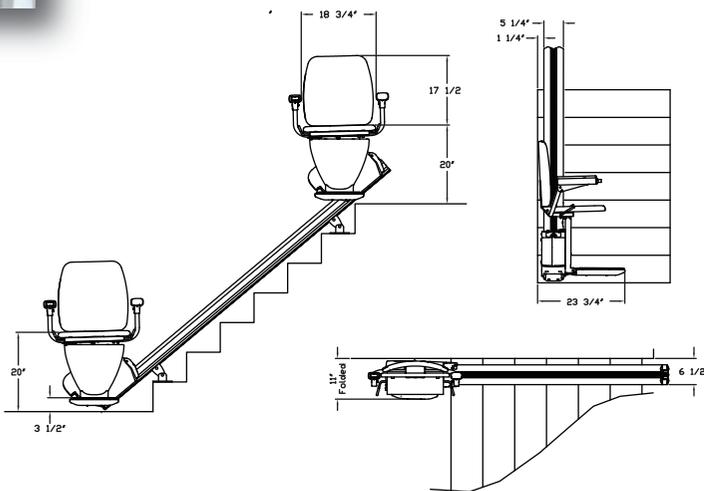

Harmar Stairway Lifts and Vertical Platform Lifts are designed to meet ANSI/ASME A18.1 Performance Safety Standards when properly equipped. While Harmar Stairway Lifts and VPLs meet National standards it is imperative to check State and Local code requirements before installing to ensure compliance. All local and State compliance is the responsibility of the purchaser.